



OT-606

ALCATEL
mobile phones

www.alcatel-mobilephones.com

ALCATEL
mobile phones

Introduction.....

TCT Mobile Limited would like to thank you for purchasing this mobile phone.

Widget Bar

- Convenient at-a-glance view of Widget applications
- Sub-menu shortcuts for quick access

Power media applications

- Music player & Radio
- Webcam

The 0.3 Megapixel camera is a good companion for PC instant messaging.

Bluetooth

With Bluetooth 2.1 supporting A2DP profiles, enjoy handsfree conversations.

My friends

Popular websites (like Bebo, Friendster, hi5, Myspace, etc.) to stay in touch with your friends wherever you are, whenever you want.

Table of contents

Safety and use.....	6
General information	11
1 Your mobile.....	13
1.1 Status bar icons.....	16
1.2 Personalise mainscreen	18
1.3 Simple menu	18
2 Getting started	19
2.1 Set-up	19
2.2 Power on your phone	21
2.3 Power off your phone	21
3 Making a call	22
3.1 Calling your voicemail	22
3.2 Receiving a call.....	23
3.3 During a call.....	23
3.4 Conference calls	24
3.5 Line switching.....	25
4 Menu arrange.....	26
5 Messages.....	27
5.1 Access	27
5.2 Conversational mode and conventional mode.....	27
5.3 Create message.....	28
5.4 Alerts.....	28
5.5 Available options.....	29
6 Email.....	31
6.1 Access	31
6.2 Email account set-up.....	31
6.3 Create Email	32
6.4 Inbox.....	32
6.5 Outbox.....	32
6.6 Sent.....	32

6.7	Drafts.....	32
6.8	Available options.....	32
7	Instant messaging.....	34
7.1	Access	34
7.2	Open a Palringo account online	34
7.3	Sign in/Sign out.....	34
7.4	Add service.....	35
7.5	Chat	35
7.6	Contacts	35
7.7	Groups	35
8	Directory	36
8.1	Consulting your directory.....	36
8.2	Adding a contact.....	37
8.3	Available options.....	38
9	Calls	39
9.1	Call log	39
9.2	My numbers	39
9.3	Billing	39
9.4	Call settings.....	40
10	Media applications.....	42
10.1	Music.....	42
10.2	Image	43
10.3	Video	44
10.4	Radio.....	44
11	Internet	46
11.1	My friends.....	46
11.2	Opera	46
11.3	Wap	46
11.4	Weather	47
12	Entertainment	48
12.1	Stopwatch.....	48
12.2	Java	48

13	Camera.....	50
13.1	Access	50
13.2	Camera	50
13.3	Video	52
14	Profiles.....	53
14.1	General	53
14.2	Meeting	54
14.3	Outdoor	54
14.4	Indoor.....	54
14.5	Silence	54
14.6	Flight mode	54
15	File manager	55
15.1	My audios	55
15.2	My images.....	55
15.3	My videos	55
15.4	My creations	56
15.5	Others files	56
15.6	Phone.....	56
15.7	Memory card.....	56
15.8	Managing audios, images, videos and creations.....	57
15.9	Formats and compatibility.....	58
15.10	Memory status.....	58
16	Bluetooth	59
17	Others.....	61
17.1	Calendar	61
17.2	Calculator	61
17.3	Notes.....	62
17.4	Clock.....	62
17.5	Converter.....	63
18	Settings.....	64
18.1	Phone settings	64
18.2	Call settings	66

18.3	Security	66
18.4	Network.....	67
18.5	Connectivity.....	67
19	Making the most of your mobile	68
19.1	PC suite	68
19.2	Webcam.....	68
20	Latin input mode/character table	69
21	Telephone warranty	72
22	Accessories.....	74
23	Troubleshooting.....	75

Safety and use.....

We recommend that you read this chapter carefully before using your phone. The manufacturer disclaims any liability for damage, which may result as a consequence of improper use or use contrary to the instructions contained herein.

• **TRAFFIC SAFETY:**

Given that studies show that using a mobile phone while driving a vehicle constitutes a real risk, even when the hands-free kit is used (car kit, headset...), drivers are requested to refrain from using their mobile when the vehicle is not parked.

When driving, do not use your phone and headphone to listen to music or to the radio. Using a headphone can be dangerous and forbidden in some areas.

When switched on, your phone emits electromagnetic waves that can interfere with the vehicle's electronic systems such as ABS anti-lock brakes or airbags. To ensure that there is no problem:

- do not place your phone on top of the dashboard or within an airbag deployment area,
- check with your car dealer or the car manufacturer to make sure that the dashboard is adequately shielded from mobile phone RF energy.

• **CONDITIONS OF USE:**

You are advised to switch off the telephone from time to time to optimise its performance.

Switch the phone off before boarding an aircraft.

Switch the phone off when you are in health care facilities, except in designated areas. As with many other types of equipment now in regular use, mobile telephones can interfere with other electrical or electronic devices, or equipment using radio frequency.

Switch the phone off when you are near gas or flammable liquids. Strictly obey all signs and instructions posted in a fuel depot, petrol station, or chemical plant, or in any potentially explosive atmosphere.

When the phone is switched on, it should be kept at least 15 cm from any medical device such as a pacemaker, a hearing aid or insulin pump, etc. In particular when using the phone, you should hold it against the ear on the opposite side to the device, if any.

To avoid hearing impairment, pick up the call before holding your phone to your ear. Also move the handset away from your ear while using the "hands-free" mode because the amplified volume might cause hearing damage.

Do not let children use the phone and/or play with the telephone and accessories without supervision.

When replacing the cover please note that your phone may contain substances that could create an allergic reaction.

Always handle your phone with care and keep it in a clean and dust-free place.

Do not allow your phone to be exposed to adverse weather or environmental conditions (moisture, humidity, rain, infiltration of liquids, dust, sea air, etc). The manufacturer's recommended operating temperature range is -10°C to +55°C.

At over 55°C the legibility of the phone's display may be impaired, though this is temporary and not serious.

Emergency call numbers may not be reachable on all cellular networks. You should never rely only on your phone for emergency calls.

Do not open, dismantle or attempt to repair your mobile phone yourself.

Do not drop, throw or bend your mobile phone.

Do not paint it.

Use only batteries, battery chargers, and accessories which are recommended by TCT Mobile Limited and its affiliates and are compatible with your phone model (see Accessories List, page 74). TCT Mobile Limited and its affiliates disclaim any liability for damage caused by the use of other chargers or batteries.

Remember to make back-up copies or keep a written record of all important information stored in your phone.

Some people may suffer epileptic seizures or blackouts when exposed to flashing lights, or when playing video games. These seizures or blackouts may occur even if a person never had a previous seizure or blackout. If you have experienced seizures or blackouts, or if you have a family history of such occurrences, please consult your doctor before playing video games on your phone or enabling a flashing-lights feature on your phone.

Parents should monitor their children's use of video games or other features that incorporate flashing lights on the phones. All persons should discontinue use and consult a doctor if any of the following symptoms occur: convulsion, eye or muscle twitching, loss of awareness, involuntary movements, or disorientation. To limit the likelihood of such symptoms, please take the following safety precautions:

- Do not play or use a flashing-lights feature if you are tired or need sleep.
- Take a minimum of a 15-minute break hourly.
- Play in a room in which all lights are on.
- Play at the farthest distance possible from the screen.
- If your hands, wrists, or arms become tired or sore while playing, stop and rest for several hours before playing again.
- If you continue to have sore hands, wrists, or arms during or after playing, stop the game and see a doctor.

When you play games on your phone, you may experience occasional discomfort in your hands, arms, shoulders, neck, or other parts of your body. Follow the instructions to avoid problems such as tendonitis, carpal tunnel syndrome, or other musculoskeletal disorders.



Prolonged exposure to music at full volume may damage the listener's hearing.

Set your phone volume safely. Use only headphones recommended by TCT Mobile Limited and its affiliates.

• PRIVACY:

Please note that you must respect the laws and regulations in force in your jurisdiction or other jurisdiction(s) where you will use your mobile phone regarding taking photographs and recording sounds with your mobile telephone. Pursuant to such laws and regulations, it may be strictly forbidden to take photographs and/or to record the voices of other people or any of their personal attributes, and duplicate or distribute them, as this may be considered to be an invasion of privacy. It is the user's sole responsibility to ensure that prior authorisation be obtained, if necessary, in order to record private or confidential conversations or take a photograph of another person; the manufacturer, the seller or vendor of your mobile phone (including the operator) disclaim any liability which may result from the improper use of the mobile phone.

• BATTERY:

Before removing the battery from your phone, please make sure that the phone is switched off.

Observe the following precautions for battery use:

- Do not attempt to open the battery (due to the risk of toxic fumes and burns).
- Do not puncture, disassemble or cause a short-circuit in a battery.
- Do not burn or dispose of a used battery in household rubbish or store it at temperatures above 60°C.

Batteries must be disposed of in accordance with locally applicable environmental regulations. Only use the battery for the purpose for which it was designed. Never use damaged batteries or those not recommended by TCT Mobile Limited and/or its affiliates.



This symbol on your telephone, the battery and the accessories means that these phones must be taken to collection points at the end of their life:

- Municipal waste disposal centres with specific bins for these items of equipment
- Collection bins at points of sale.

They will then be recycled, preventing substances being disposed of in the environment, so that their components can be reused.

In European Union countries:

These collection points are accessible free of charge.

All phones with this sign must be brought to these collection points.

In non European Union jurisdictions:

Items of equipment with this symbol are not to be thrown into ordinary bins if your jurisdiction or your region has suitable recycling and collection facilities; instead they are to be taken to collection points for them to be recycled.

CAUTION: RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.

• CHARGERS

Mains powered chargers will operate within the temperature range of: 0°C to 40°C.

The chargers designed for your mobile phone meet with the standard for safety of information technology equipment and office equipment use. Due to different applicable electrical specifications, a charger you purchased in one jurisdiction may not work in another jurisdiction. They should be used for this purpose only.

• RADIO WAVES:

Proof of compliance with international standards (ICNIRP) or with European Directive 1999/5/EC (R&TTE) is required of all mobile phone models before they can be put on the market. The protection of the health and safety for the user and any other person is an essential requirement of these standards or this directive.

THIS MOBILE PHONE COMPLIES WITH INTERNATIONAL AND EUROPEAN REQUIREMENTS REGARDING EXPOSURE TO RADIO WAVES.

Your mobile phone is a radio transmitter/receiver. It was designed and manufactured to comply with the radiofrequency (RF) exposure thresholds recommended by international requirements (ICNIRP)⁽¹⁾ and by the Council of the European Union (Recommendation 1999/519/EC)⁽²⁾.

These limits are part of a set of requirements and establish authorised radiofrequency levels for the public. These limits were established by independent groups of experts on the basis of regular and detailed scientific assessments. They include a significant safety margin intended to ensure the safety of all, regardless of age or state of health.

The exposure standard for mobile phones is determined by a measurement unit known as the Specific Absorption Rate or "SAR". The SAR limit is set by international requirements or by the Council of the European Union at 2 watts/kilogram (W/kg) averaged over 10 grams of body tissue. The tests used to determine SAR levels were carried out on the basis of standard usage modes with the phones transmitting at their maximum power level over the entire range of frequency bands.

Although the SAR was established at the highest certified level, the actual SAR level for the mobile phone during use is generally much lower than the maximum values. In fact, since mobile phones are designed to operate at many different power levels, they only use the minimum level of power required to provide a connection to the network. In theory, the closer you are to a base station antenna, the lower the power level required by the mobile phone.

The highest tested SAR value for this mobile phone for use at the ear and compliance against the standard is 0.8 W/kg. While there may be differences between the SAR levels on various phones and at various positions, they all meet the relevant International guidelines and EU requirements for RF (radio-waves) exposure.

⁽¹⁾ The ICNIRP requirements are applicable in the following regions: Central America (except Mexico), South America, North and South Africa, Pacific Asia (except Korea), Australia.

⁽²⁾ The European recommendation (1999/519/EC) is applicable in the following regions: Europe, Israel.

The World Health Organisation (WHO) considers that present scientific information does not indicate the need for any special precautions for use of mobile phones. If individuals are concerned, they might choose to limit their own or their children's RF exposure by limiting the length of calls, or using "hands-free" devices to keep mobile phones away from the head and body (fact sheet n° 193). Additional information about electromagnetic fields and public health are available on the following site: <http://www.who.int/peh-emf>.

Although no danger relating to the use of telephone was ever proved, the World Health Organisation advises as a precautionary measure to use your telephone with a good level of network reception as indicated on the telephone display (4 to 5 bars). It is also advised to keep the telephone, during communications, away from the belly of pregnant women and from the lower abdomen for teenagers.

Your telephone is equipped with a built-in antenna. For optimal operation, you should avoid touching it or degrading it.

As mobile devices offer a range of functions, they can be used in positions other than against your ear. In such circumstances the device will be compliant with the guidelines when used with headset or usb data cable. If you are using another accessory ensure that whatever phone is used is free of any metal and that it positions the phone at least 2cm away from the body.

• LICENCES

Obigo®



is a registered trademark of Obigo AB.

microSD Logo is a trademark.



The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by TCT Mobile Limited and its affiliates is under license. Other trademarks and trade names are those of their respective owners.

OT-606 Bluetooth QD ID B016876



eZiText™
Zi corporation

eZiText™ and Zi™ are trademarks of Zi Corporation and/or its Affiliates.



Java™ and all Java™ based trademarks and logos are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries.

Opera Mini™ is a registered trademark of Opera Mini.

General information

- **Internet address:** www.alcatel-mobilephones.com
- **Hot Line Number:** see “TCT Mobile Services” leaflet or go to our Internet site.

On our Internet site, you will find our FAQ (Frequently Asked Questions) section. You can also contact us by e-mail to ask any questions you may have.

An electronic version of this user guide is available in English and other languages according to availability on our server: www.alcatel-mobilephones.com

Your telephone is a transceiver that operates on GSM networks with 900 and 1800 MHz bands.

CE 1588

This equipment is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. The entire copy of the Declaration of Conformity for your telephone can be obtained through our website: www.alcatel-mobilephones.com.

Protection against theft ⁽¹⁾

 
Your telephone is identified by an IMEI (phone serial number) shown on the packaging label and in the phone's memory. We recommend that you note the number the first time you use your telephone by entering * # 0 6 # and keep it in a safe place. It may be requested by the police or your operator if your telephone is stolen. This number allows your mobile telephone to be blocked preventing a third person from using it, even with a different SIM card.

Disclaimer

There may be certain differences between the user manual description and the phone's operation, depending on the software release of your telephone or specific operator services.



⁽¹⁾ Contact your network operator to check service availability.

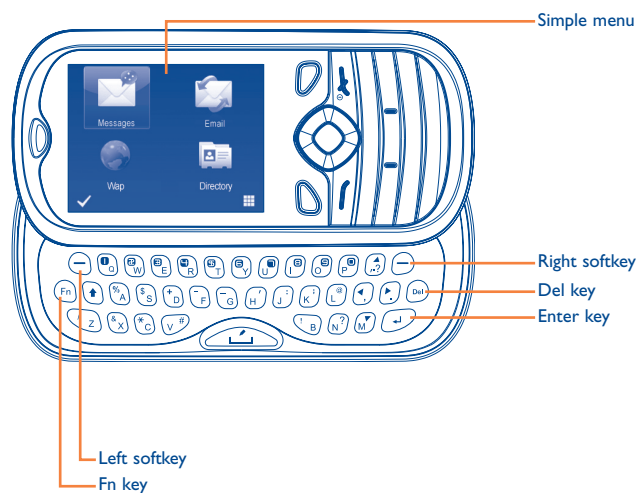Your mobile.....





Confirm an option (press the middle of the key)

Press navigation  key from the main screen to view application lists from widget bar; and then press navigation  key to access sub-menus accordingly.



Access your voicemail (long keypress)



Input top-half character (press once), press twice to lock in this mode



Left softkey



Right softkey



Pick up

Send a call

Access Call log (Redial) (short keypress)



Switch on/Switch off the telephone (long keypress)

End call

Return to the main screen



Status bar icons ⁽¹⁾



Battery charge level



Vibrate alert: your phone vibrates, but does not ring or beep with the exception of the alarm (see page 53).



Bluetooth status (Activated).



Bluetooth status (Connected to an audio device).



Headset connected.



Keypad locked.



Call forwarding activated: your calls are forwarded (see page 40).



Alarm or appointments programmed (see page 62).



Level of network reception.



Voicemail message arrived.



Missed calls.



Stopwatch is active.



Radio is on.



WAP alerts ⁽²⁾.



Roaming.



Memory card scanning completed.



SIM card missing.














Line switching ⁽³⁾; indicates the selected line.



⁽¹⁾ The icons and illustrations in this guide are provided for informational purposes only.

⁽²⁾ Depending on your network operator.





⁽³⁾ Contact your network operator to check service availability.

-  **GPRS connection status** (Activated).
-  **GPRS connecting.**
-  **Music player active.**
-  **Message receipt in progress.**
-  **Sending a SMS.**
-  **Sending a MMS.**
-  **Silence mode:** your phone does not ring, beep or vibrate with the exception of the alarm (see page 53).
-  **SMS unread**
-  **(Flicking)Message list is full:** your phone cannot accept any new messages. You must access the message list and delete at least one message on your SIM card.
-  **Flight mode.**
-  **A2DP connected.**

1.2 Personalise mainscreen

You may customize your mainscreen by selecting  through  key from the main screen.

1.2.1 Widget bar

You may customize widget lists on the main screen as a convenient shortcut to your desire. To add/remove a widget, select **"Edit widgets"** and use  key to mark/unmark, and then confirm by pressing **"Save"**. To reorder widgets, select **"Reorder widgets"** and choose one item by pressing  key, scroll up or down to the required position, place using the  key, and then confirm by selecting **"Done"** with  key.





Two widgets cannot be removed: Calls, Messages.

1.2.2 Change wallpaper

You will be directed to **"My images"** with this option. You may choose one image as favourite wallpaper. (see page 55)

 
1.3 Simple menu

Four frequently-used applications from the main screen will be displayed when you slide open your phone: **Messages, Email, Directory, Wap.** You can quickly choose any of the above by selecting  with the left softkey, or you may select  with the right softkey to switch to the full main menu screen.

2 Getting started


2.1 Set-up

Removing or installing the back cover

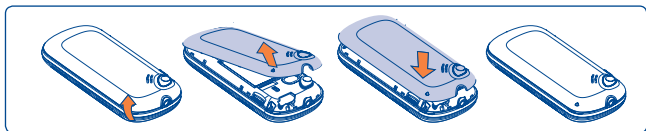

Inserting or removing the SIM card ⁽¹⁾

 
You must insert your SIM card to make phone calls.

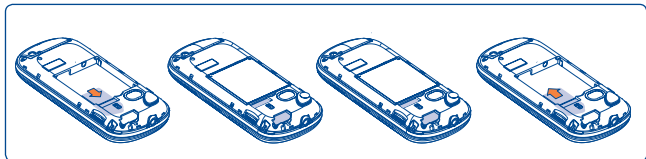

Place the SIM card with the chip facing downwards and slide it into its housing. Make sure that it is correctly inserted. To remove the card, press the bottom and slide it out. Please power off your phone before you remove the SIM card.


⁽¹⁾ Check with your network operator to make sure that your SIM card is 3V or 1.8V compatible. The old 5 Volt cards can no longer be used. Please contact your operator.

 Installing or removing the battery

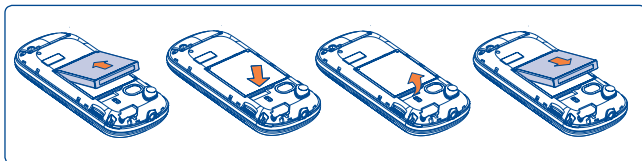


Insert and click the battery into place, then close the telephone cover. Unclip the cover, then remove the battery.

 Charging the battery

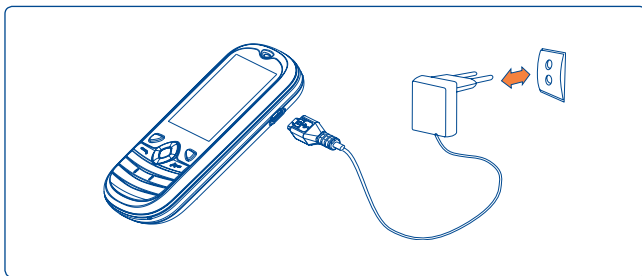

Connect the battery charger



- Charging may take about 20 minutes to start if the battery is flat.
- Be careful not to force the plug into the socket.
- Make sure the battery is correctly inserted before connecting the charger.
- The mains socket must be near to the phone and easily accessible (avoid electric extension cables).

- When using your telephone for the first time, charge the battery fully (approximately 3 hours). You are advised to fully charge the battery .





The charge is complete when the animation stops.

2.2 Power on your phone

Hold down the  key until the telephone powers on, type in your PIN code if necessary and then confirm with the  key. The main screen is displayed.



If you do not know your PIN code or if you have forgotten it, contact your network operator. Do not leave your PIN code with your telephone. Store this information in a safe place when not in use.

If cell broadcast messages are displayed, use the  key to browse through them or press the  to return to the main screen.

While the phone is searching for a network, “Searching/Emergency” will be displayed.

In the power on screen, you also have access to the functions of “Radio”, “Camera”, “Music player”, etc. even if there is no SIM card inserted.

2.3 Power off your phone


Hold down the  key from the main screen.

3 Making a call.....


Dial the desired number then press the  key to place the call. If you make a mistake, you may short press  key to delete the incorrect digits one by one, or you may long press  key to delete all.

To hang up the call, press the  key.

Making an emergency call

If your phone has network coverage, dial emergency number and press the  key to make an emergency call. This works even without a SIM card and without typing the PIN code or unlocking the keypad.

3.1 Calling your voicemail ⁽¹⁾

Your voicemail is provided by your network to avoid missing calls. It works like an answering machine that you can consult at any time. To access your voicemail, hold down the  key.



If the access number for your operator's voicemail service does not work, dial the number that you were given. To change this number at a later date, refer to “My numbers” (see page 39).





To use your voicemail service from abroad, contact your network operator before leaving.

⁽¹⁾ Contact your network operator to check service availability.

3.2 Receiving a call



When you receive an incoming call, press the  key to talk and then hang up using the  key.

If the  icon is displayed, the vibrator is activated and there is no ringtone. If the  icon is displayed, the phone neither rings nor vibrates.




The caller's number is displayed if it is transmitted by the network (contact your network operator to check service availability).

Muting the ringtone

To mute ringtone of current incoming call, press  key. Answer the call by pressing the  key.


Rejecting a call

Press the  key once, or reject it by SMS (**Options\Reject call with SMS**).

3.3 During a call ⁽¹⁾

During a call, following options are available:

- New call (Hold the current call and dial another number)
- Hold (Hold the current call)
- Mute (Mute the current call)
- DTMF (Enable/Disable sending DTMF during the call)
- Volume (Adjust the volume level)

PROMPT: You may also adjust sound level by using  key directly during a call.

⁽¹⁾ Contact your network operator to check service availability.

- Switch audio patch (Switch the audio path between the Bluetooth headset and phone)
- Directory (Enter the directory)
- Messages (Enter Message Centre)
- Calendar (Enter Calendar)
- Services (Enter the Service menu)
- Sound recorder (record your current call).

You can switch the audio speech from handset to Bluetooth device when connected.


You may also use **Handsfree** function with  during a call.


WARNING: move the handset away from your ear while using the “handsfree” option because the amplified volume might cause hearing damage.

Handling two calls

- Answering a second call (ensure that “**Call waiting**” is activated, see page 40).
- To call a second party during a call, dial the number directly.

3.4 Conference calls ⁽¹⁾

Your phone allows you to talk to several people at the same time (up to five). If you are on a double call, press “**Options**” and select “**Conference**”. If a third call comes in, answer it by pressing the  key and speak with your new caller.

This caller becomes a member of the conference if you press “**Options**” and select “**Add to conference**”. Pressing  disconnects the current call.

To end the conference call, press “**Options**” and select “**End conf.**”.

⁽¹⁾ Contact your network operator to check service availability.

3.5 Line switching ⁽¹⁾

Your SIM card can contain two distinct telephone numbers. Under “Calls”, choose “**Line switching**” and then select a default line; all your outgoing calls will be made from this number. Incoming calls, however, will continue to use either of the two lines.



The services programmed on the default line do not impact those selected on the other line.

⁽¹⁾ Contact your network operator to check service availability.



4 Menu arrange



Main menu is designed to vary according to your preference.

You may access this function by selecting “**Menu arrange**” from the main menu.

Change the order

Press left softkey from the main menu screen and select “**Move**” or long keypress  key till tick “√” is shown, then move the cursor to your favourite destination and confirm with  key.

Show/Hide

Access “**Menu arrange**”, press  to show/hide the main menu items.

Restore factory settings

Access “**Menu arrange**”, select “**Options**”, choose “**Restore factory settings**” to return to the default menu display.

5 Messages



You can create, edit and receive SMS, MMS with this mobile phone.


MMS enables you to send video clips, images, photos, animations and sounds to other compatible mobiles and e-mail addresses.



The MMS function can only be used if the service is provided by your operator, and if your contract includes the MMS option and if all the parameters for MMS have been entered (see page 30).

5.1 Access




You may access this menu using the following options:

- Access from the main menu by selecting **“Messages”**.
- Access from the simple menu by selecting **“Messages”**. (see page 18)
- Select  from widget bar, and then enter the sub-menu you require.

5.2 Conversational mode and conventional mode

In conversational view mode you can view chat history in chronological order. In conventional view mode you may have access to the following folders: **Inbox, Outbox, Sent, Drafts, Voicemail, Broadcast SMS, Empty folder, Templates, Settings**, etc. Conversational view mode is set as default. You may switch to conventional mode by selecting **“Options\Settings\Conversational mode\On(Off)”**. The following instructions are based on conversational mode.

5.3 Create message

You can select **“Messages\Write msg”** from the main menu, or access from widget  to create text/multimedia message. One or more recipients can be added in the list and you can remove a recipient by pressing . Press **“Directory”** through  key to multi-select recipients from Directory.

An SMS will be converted to MMS automatically when images, videos, audio, slides or attachments are inserted, Subject, CC/BCC/email address is added; or the message contains more than 8 pages of text.



An SMS message of more than a certain number of characters (the number of characters depends on your language) will be charged as several SMS. An MMS message containing photos and/or sounds may also be billed as more than one message.

5.4 Alerts

5.4.1 Setting messages

The storage of provisioning messages.

5.4.2 Voicemail

View and edit the voicemail number.

5.4.3 Broadcast SMS

Store the received Broadcast SMS.

5.4.4 WAP alerts


Store WAP push messages.

5.5 Available options

5.5.1 View

With this option, you can view details of the selected thread.

5.5.2 Delete

To delete a thread (containing all chat history), select “**Options\Delete**” , and then confirm with  key.

5.5.3 Settings

Conversational mode

This option enables you to switch on/off conversational message view mode.

Text messages

Profile settings

- Profiles can be retrieved directly from SIM card. Alternatively, you can create your own profile.

Common settings

- Delivery report, request for acknowledgement of delivery report On/Off. Reply path⁽¹⁾: show reply path.

Alphabet management

- Enables the definition of SMS data coding for management SMS sending.

Memory status

- Memory used on the phone.

Preferred storage

- Select default message storage, SIM or phone.

Preferred. bearer

- Bearer preference.

Multimedia messages

Edit

- Set edit mode, image size and signature.

Sending

- Set the values for validity period, Read report, etc.

Retrieve

- Set the values for Home network, Roaming network, etc.

Edit profiles

- Follow the same procedure as for setting your WAP connection.

Memory status

- Memory used on the phone.

Broadcast SMS⁽¹⁾

Receiving mode

- Enable to receive broadcast SMS.

Languages

- Language selection.

Channel settings

- Add/Edit channels.



⁽¹⁾ Depending on your network operator.

⁽¹⁾ Depending on your network operator.

6 Email


Your phone has an email client with the settings pre-defined for a few popular email services like – GoogleMail, Windows live, Yahoo, AOL, etc. Besides this, you can set up other POP3 or IMAP4 email accounts that you may be using.

6.1 Access

Press  through  key from the main screen to enter the main menu, and then select “**Email**”, or your may access from the simple menu “**Email**” (see page 18).

6.2 Email account set-up

Pre-defined email service

If you own an email account of predefined services, you can install it to your phone by selecting the service (GoogleMail, yahoo, etc.), entering the username, password and account name, and then confirming with  key.

New email service

To set up a new email account other than the predefined email services, press “**Options\New account**”, select “**Other Email accounts**”.

You are required to enter your email address, select protocol ⁽¹⁾ (POP3 or IMAP4) and network, then enter your incoming server address and outgoing server address, and then input your user name, password and account name, select “**Save**”.

⁽¹⁾ Consult your email service provider for more information about protocol.

6.3 Create Email

Select “**Email\Options\Create Email**” to enter write email interface. Input the initial letter of the recipient name. Subsequent letters may be added for accurate search. Input the next recipient to add one more Email address.

6.4 Inbox

Folder of all received Emails.

6.5 Outbox

Folder of all unsent Emails.

6.6 Sent

Folder of all sent Emails.

6.7 Drafts

Folder of all draft Emails.

6.8 Available options

Select

- Select to enter the menu.

Send and receive

- To connect the email server in order to receive/send mails.

Send and receive all accounts


- To connect all email accounts' server in order to receive/send mails.

- Create Email** • To create a new Email.
- Edit account** • To edit the detailed configuration information of the selected account.
- Delete account** • To delete the current selected account.
- New account** • To create a new email account.
- Empty folder** • Delete all emails in “**Inbox/Outbox/Sent/Drafts**”.
- Delete marked** • To delete the marked mail in the selected folder.
- Delete all** • To delete all the mails in the selected folder.
- Delete all marked** • To delete all marked mails in all folders.
- Empty all folders** • Delete all emails in all folders.

7 Instant messaging⁽¹⁾

Palringo Instant messaging (IM) allows you to chat with other people using Palringo account. You can also connect to other popular IM services through Palringo, like Yahoo, AIM, GG, ICQ, Google talk, iChat etc. Please note that the services may be upgraded depending on your client version.

7.1 Access

To access Palringo, press  from the main screen to enter the main menu, select .

7.2 Open a Palringo account online

Before activating this service, you are required to open a Palringo account online. There are two ways to do this:

- Select “**Create an Account**” tab to open an account in phone.
- You can also open account directly on website:
<http://www.palringo.com/en/gb/>.

7.3 Sign in/Sign out

To connect to Palringo instant messaging server, please select “**Sign in**”. You are required to input your Palringo account information, like username (Email address), password, sign in status, etc.

To sign out, click “**Menu**”, then “**Sign out**”.

⁽¹⁾ Depending on your network operator.

7.4 Add service

Various services (Yahoo, Google, ICQ etc.) can be added by “**Menu\Services\Add Service**”.

7.5 Chat

To start a chat, select one online contact, then “**Menu\Private chat**”. During chat, you can also exchange voice or photo messages with your community.

7.6 Contacts

• Add a contact

To add a contact, click “**Menu**”, then select “**Add contact**”.

First, you need to specify which service, Yahoo for example, you want to add the new contact to. Then input the contact's email address.



Your request will be sent to the contact for approval. Once accepted, the contact's name and status will appear on your contact list.

• Delete a contact

To delete a contact, select one contact, then “**Menu\Delete contact**”. The selected contact will be removed from your contact list.

7.7 Groups

With this menu, you can “**Join a group**” or “**Create a new group**”. You can begin chatting with all members in the group simultaneously.

8

Directory



8.1 Consulting your directory

You may have access to this function from the main menu by selecting “**Directory**”, or you may access from the simple menu “**Directory**” (see page 18).

The whole contact list is categorized by **Favourite**, **Most called** and **All contacts**.



Favourite



Most called

Searching for a contact

You can search for a contact by inputting the initial of their name. Subsequent letters may be added to refine the search.




Viewing a contact

Select a name from your directory to read the contact information.

Sending vCard via Bluetooth

Selecting the vCard you wish to transfer (“**Options\Send vCard\By Bluetooth**”).

Making the call

Press the  key once the name is selected. If several numbers are associated with the name to be called, you must first choose the number from the list (Mobile, Home, Work, etc.) using the  key. Press the  key to make the call.



Information in the directory and the diary may be sent to and received from a computer using the PC suite.

8.2 Adding a contact

You can add a new contact by selecting “**Options\Add contact**”.

When you create a new contact in the phone directory, at least one of the following fields must be filled in: First name, Last name, Image, Mobile, Home, Work, Email, Birthday, Add birthday reminder, URL, Address, Ringtone, Group, Copy to SIM/ Not copy to SIM.

You can move from one field to another using the  key.

Adding birthday reminder

You can set a birthday reminder when editing contact information. This will remind you at regular intervals during the day prior to the set date.



If you use your phone abroad, store the numbers in your directories in international format “+” followed by the country code (see page 22).



8.3 Available options




From the list of names in Favourite/Most called, All contacts, you can access the following options:

- | | |
|-----------------------|---|
| Add contact | <ul style="list-style-type: none">• Add a contact (name, numbers, address, e-mail, etc.) in the directory. |
| Send message | <ul style="list-style-type: none">• Send an SMS/MMS/Email to a contact you selected from the directory. |
| Delete contact | <ul style="list-style-type: none">• Delete the selected contact. |
| Group | <ul style="list-style-type: none">• You can view, send messages or e-mails to the group you select or you can create, delete groups as you want. |
| View mode | <ul style="list-style-type: none">• You may view contacts stored in phone only or both in SIM and phone. |
| More | <ul style="list-style-type: none">• Import from SIM Copy the whole directory from SIM to phone only if there is sufficient memory.• Export to SIM Copy the whole directory from phone to SIM only if there is sufficient memory.• My number Type in, modify or send the user's own number by SMS.• Memory status View used and available space in SIM and Phone directory. |

9 Calls.....

9.1 Call log

You can access your call log by pressing the  key from the main screen or selecting  from the main menu, then select “**Call log**”. Once enter this menu, following lists will be displayed:

-  Missed calls
-  Outgoing calls (Redial)
-  Answered calls/Rejected calls

Select a number from the call memory and press “**Options**” through  key to Send message, Save to directory, Edit before call, etc.

9.2 My numbers

Type in or modify your telephone number or the number to access your voicemail and confirm. Your telephone number is usually written on your SIM card.

9.3 Billing⁽¹⁾

You can access different items with this option:

- | | |
|---|---|
| Last call cost/
Total cost/Max
cost/Reset cost/
Price per unit | <ul style="list-style-type: none">• You can view the last, max or total cost of charged calls, modify it or reset it and enter the cost of a call in the currency of your choice. |
|---|---|

⁽¹⁾ Depending on your network operator.


Duration

- You can view the total duration of all outgoing calls or reset it.

GPRS counter

- Management of data usage volume (in kilobytes).

Beep duration

- You can activate or cancel the beep emitted during a call with a specified frequency (enter the frequency and confirm by  key ,or .

9.4 Call settings⁽¹⁾


You can access a number of items with this option:

9.4.1 Call waiting

Activate/deactivate the notification of a second incoming call by a beep.

9.4.2 Call forwarding

You can activate, cancel or verify the status of the call forwarding to the voicemail or to a specified number. The following configurations are possible:

- Unconditional: systematic forwarding of all your calls. The  icon is displayed.
- Conditional: if your line is busy, if you don't answer or if you are outside the network range.

⁽¹⁾ Contact your network operator to check service availability.

9.4.3 Call barring

You can activate or deactivate the call barring for outgoing and incoming calls. The various options are:

- Outgoing calls**
- The following configurations are possible:
 - All calls
 - All outgoing calls are barred.
 - International calls
 - Outgoing international calls are barred.
 - International except home
 - Outgoing international calls except those to your country of subscription are barred.
- Incoming calls**
- The following configurations are possible:
 - All calls
 - All incoming calls are barred.
 - When Roaming
 - Incoming calls are barred when you are abroad.
- Cancel all barring**
- Deactivate all call barring.
- Change barring Password**
- Change the original Password for activating call barring.

9.4.4 Caller ID

Activate/deactivate CLIR.

9.4.5 Line switching ⁽¹⁾

Line switch between line 1 and line 2.

9.4.6 Auto redial

You can activate or deactivate the automatic callback of your party for calls that do not get through the first time.

⁽¹⁾ Depending on your SIM card.

10 Media applications.....

10.1 Music



You may access this feature from the main menu by selecting “**Music**”.

You will have full flexibility of managing music both on your mobile and memory card.

You can have access to your music files through one of the following:

- All songs**
- Contains all songs both on phone memory and memory card.
- My star list**
- You can simply add your favourite songs to “**My star list**” by holding down *,, during playing music (max 100).
- Folders**
- Category of songs in folder.
- Album/Artist/Genre**
- Music files are categorized by Album, Artist or Genre based on information stored in the tags. Those missing such information will be classified as “**Unknown files**”.
- Update songs**
- Update the information of songs saved in phone or memory card.

Use keys to manage the Music player:

- ⬆ : Set the volume level
- ⬅➡ : Go to previous/next title (short keypress)
Fast play backward/forward (long keypress)

10.1.1 Settings

Access by pressing the right navigation key for following options:

- Play mode** • Enable you to switch between **Normal**, **Repeat current**, **Repeat all**, **Shuffle** and **Repeat shuffle**.
- Equalizer** • Different music styles preset in the phone.
- Bluetooth settings** • With this setting, you can play music in Bluetooth, Phone or both in Phone & Bluetooth.
- Display** • Enable your player to display spectrum, song information or lyric.

10.1.2 Playing with lyrics

Lyrics can be displayed in synchronization with the music.

10.2 Image



A library links to the images in “**My creations**” and “**My images**” in phone to be shown in list, slide, or thumbnail, set as Wallpaper, Power on/off display, and Contact ID, or sent by MMS, Email, Bluetooth.

10.3 Video



Contains all video clips both in phone and memory card and enables you to **Play**, **Send** (by MMS, Email, or Bluetooth), **Delete**, **Rename**, **Sort** (by name, type, time or size), etc.

Use keys to manage the Video player:

- : Set as play/pause
- : Set the volume level
- : Previous/next video
- : Adjust the display screen size via left softkey
- : Back to previous menu

10.4 Radio



Your phone is equipped with a radio ⁽¹⁾ with RDS functionality. You can use the application as a traditional radio with saved channels or with parallel visual information related to the radio program on the display if you tune to stations that offer Visual Radio service. You can listen to it while running other applications.



To use it, you must plug in your headset, which works as an antenna connected with your phone.

⁽¹⁾ The quality of the radio depends on the coverage of the radio station in that particular area.

Available options:

- Channel list** • Open the list of saved stations.
- Save channel** • Save the current tuned station to the “**Channel list**”.
- Auto search** • Start auto search and stations will be automatically saved to “**Channel list**”.
- Enter the frequency** • Enter the frequency manually.
- Turn off** • Stop playing the radio.
- Radio Recording** • Record the radio: files will be automatically saved to “**Notes**”.
- Settings** • Use ◀ ▶ navigation keys to manage settings.
- Activate loudspeaker/ Play in headset** • Listen to the radio using loudspeaker or headset.
- Activate mono mode/stereo mode** • Switch between mono and stereo mode.
- Update station name ⁽¹⁾** • Save RDS information as station name in the channel list.
- Optimize radio frequency** • Optimize the audio quality.



Hold down the ▶ key to enter “**Manual tuning**” mode and go to the previous/next station by pressing the ◀ ▶ navigation keys in the Radio interface.

⁽¹⁾ Availability dependant on RDS information detected.

Internet ⁽¹⁾

11.1 My friends

It migrates self-contained sub-trees of the websites to let you stay in touch with your friends by flicking through Bebo, Friendster, Hi5, Myspace, Flickr, etc.

11.2 Opera

Not only does Opera Mini give you the full Web experience where you stay in touch with your friends, obtain information, do your online banking etc., but it is also designed to save time by using compressed web pages.

11.3 Wap

11.3.1 Homepage

Launch the Wap browser with the preset homepage.

11.3.2 Bookmarks

Access your favourite sites.

11.3.3 Go to URL

Enter the URL of Wap site.

11.3.4 Recent pages

Pages which you recently browsed.

⁽¹⁾ Depending on your network operator. May cause additional network charges for data flow to provide this service. Extra fees might also be charged in roaming states.

11.3.5 Offline pages

Pages available for offline viewing.

11.3.6 Service inbox

Store WAP push messages.

11.3.7 Settings

Customise your browser preferences.

11.4 Weather.....

Your phone is equipped with a weather function for consulting up to 3-day forecasts of favourite cities.

To access the function, you can press  through  key to access the main menu and select the .

Available options:

More information Search more weather information online.

Forecast Display 3-day weather forecast.

Update Refresh weather information.

My cities List all my cities, you can add new city, set default city, delete the selected city, etc. via “**My cities\Options**”.

Settings Set unit, update mode and network.

12 Entertainment

12.1 Stopwatch.....

The stopwatch is a simple application for measuring time with the possibility to register several results and suspend/resume measurement.

12.2 Java

12.2.1 Launch an application

Select “**Java applications**” to launch applications.

12.2.2 Java settings

The “**Java**” menu allows you to manage Java settings, in which you may set Java audio, vibration, network and identify how much Heap size is available.

12.2.3 Java downloading

You can download new Java™ applications in the “**Java**” menu by selecting “**Download application**” from “**Options**”. The list of available Web bookmarks dedicated to the application download will then be displayed.

Select the appropriate bookmark to go to the desired Web page.



Each downloaded java game can be assigned as a main menu display for quick access.

12.2.4 Trusted certificates

View detailed information of the trusted certificates supported by your phone.

Disclaimer

Downloading or running applications will not damage or alter any software already in your mobile telephone designed to support Java™ technology.

TCT Mobile Limited and its affiliates waive any responsibility and refuse to guarantee applications that are subsequently used, as well as for all applications not embedded in the handset upon purchase.

The purchaser alone bears the risk of loss, damage or defect of the handset, or of applications/software, and generally of any damage or consequence resulting from the use of the said applications/software. In the event that the said applications/software, or the subsequent setup of any function are lost due to technical reasons resulting from the handset being replaced/repared, the mobile phone owner should repeat the operation and download or set up again. TCT Mobile Limited and its affiliates grant no guarantee and disclaim any responsibility if the operation cannot be repeated or cannot be performed without incurring some cost.

13 Camera.....

Your mobile phone is fitted with a camera for taking photos and shooting videos that you can use in different ways:



- store them in your **“File manager\My creations”**.
- send them in a multimedia message (MMS) to a mobile phone or an email address.
- send them directly by Email or Bluetooth.
- customise your main screen (see page 64).
- select them as incoming call image to a contact in your directory.
- transfer them by data cable or microSD card to your computer.

13.1 Access

Select  from the main menu to access this function.



13.2 Camera

13.2.1 Take a photo, save or delete

The screen acts as the viewfinder. Position the object or landscape in the viewfinder and press  to take the image and the images will be automatically saved. If you don't want it, you may directly delete it with  key.

13.2.2 Settings in framing mode





Before taking the photo, you can adjust a number of settings by using the following shortcuts:

From the photo shot screen, press the press  through  not only to access: “**Image size**”, “**Capture mode**”, “**Quality**”, “**Timer**”, “**Banding**”, “**Night mode**”, “**Exposure Value**”, “**White balance**”, “**Color mode**”, but also following ones:

- My creations** • Go to “**File manager\My creations**” to view the photos you have taken.
- Storage** • You may choose saving location if MicroSD card is inserted.
- Access Video** • Access Video recording mode.
- Restore default** • Return all settings to default values.

	Image size		Access Video
	Capture mode		Restore default
	Quality		Night mode
	Timer		Exposure Value
	Banding		White balance
	My creations		Color mode
	Storage		

13.2.3 Options available after taking the photo

Once you have taken a photo, five icons appear on the photo for your selection. By pressing , , , , you can send your photo by Bluetooth, MMS and Email, assign it to a contact, or set as wallpaper.


13.3 Video

You can record a video clip of unlimited length, as long as the battery sustains and there is sufficient memory.




We strongly advise you to change the default folder to “**Memory card**” to store your photos and videos.

13.3.1 Framing mode

When you enter the “**Video**” function, you are in Framing mode. Use the mobile screen as a viewfinder and press  for the settings of **White balance**, **Exposure Value**, **Night mode**, **Banding**, **Quality**, **Record audio**, **Color mode**, **Storage**, **Access camera**, to access the “**File manager\My videos**”, and to **restore default value**.

13.3.2 Recording mode

Once you have chosen your settings, you can launch the recording of your video-clip by pressing the  key.



If you receive a call in recording mode, video recording will be stopped and a pop up message will inquire if you want to save it.

13.3.3 Further operations after shooting a video

After shooting a video, three icons will appear on the screen so you can choose to send your video by Email, MMS, or Bluetooth.



In the list of “**My videos**”, press “**Options**” to play the video and send by MMS, Email or Bluetooth.

4 Profiles.....

With this menu, you may personalise ringtones for different events and environments.

14.1 General

To modify the sound settings, select “**Edit**” and you will see the functions below using  key:

- Ringtone** Select a melody from the list by scrolling up/down.
- Mode** You may set your phone ringtone to Normal, Discreet (ring with beep), Vibration (all sounds are replaced by vibrations except for alarms), Vibration and Melody, Vibration then Melody, Beep and vibration, Silence (no sounds except for alarms, the icon  will be displayed).
- Volume** Adjust the volume by  key.
- Key beep** Select the type of key beep.
- Message beep** Select a melody for a new incoming message.
- Power on beep** Select a Power on melody for your phone.
- Power off beep** Select a Power off melody for your phone.

14.2 Meeting

When this is selected the phone will not ring or beep unless an alarm has been set. A new event will cause it to vibrate.

14.3 Outdoor

It is a profile designed for outdoor users who require louder ringtones.

14.4 Indoor

Ringtone/beep volume will be slightly lower than General mode volume.

14.5 Silence

This profile will turn off all ringtones, even notification sounds.

14.6 Flight mode

Voice calls, Bluetooth and messaging functions are barred. Can be used to increase standby duration.

15 File manager



You will have access to all audio and visual files stored in phone or memory card in File manager.

15.1 My audios

Choose an audio for the ON/OFF screen, for an incoming call, a message alert, power on/off ringtone or an alarm and scheduler.

The “**My audios**” album contains the following folders ⁽¹⁾:

- Music: full track music.
- Melodies: melodies that can be set as ringtone.
- Recorded: all recorded sounds.
- General: contains all audio files stored in phone or memory card.



DRM: Digital Rights Management feature allows sounds and images to be played while protecting the associated copyright. DRM counter-based files and files with expired rights will not be automatically played when scrolling the list.

15.2 My images

You can select an image or a photo as wallpaper, ON/OFF screen, or assign it to a contact in the directory.



The images will be displayed in alphabetical order.

15.3 My videos

The “**My videos**” album contains all video clips recorded by the user, originally embedded in the phone and downloaded to the phone or memory card.

⁽¹⁾ The embedded folder names cannot be modified. However, in certain cases, you can modify, delete and add items included in these folders.

15.4 My creations

This feature stores all the photos captured by your mobile phone.

15.5 Others files

A folder contains all downloaded java applications.

15.6 Phone

An entry to access all files in all folders stored in phone.

 
15.7 Memory card

You can access all files stored in the memory card here.



When a memory card is inserted for the first time, it will be scanned and the default folders will be created.

Inserting or removing the memory card:

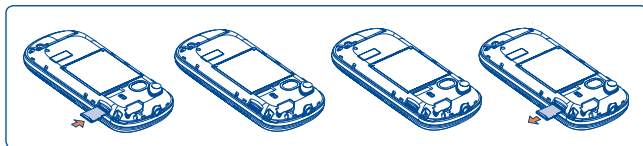


Unclip the cover and insert the MicroSD card into the slot. Unclip the cover and gently push the memory card until unlocked. Take out your MicroSD card and clip the back cover.

Available options

- Open** • Open a folder.
- Create folder** • Create more folders.
- Delete folder** • Remove folders.
- Rename folder** • Edit folder's name.
- Empty folder** • Delete all files in one folder.
- Memory card** • To format or to query its memory status.

15.8 Managing audios, images, videos and creations

According to the item chosen, you can access some of the functions below:

- View** • View the selected image.
- Play** • Play the selected video.
- Send** ⁽¹⁾ • Send the audio/image/video.
- Delete** • Delete the audio/image/video selected (not applicable for embedded items).
- Set as** • - Image→wallpaper, switch ON/OFF, assign it to a contact.
• - Sound→ringtone, message beep, switch ON/OFF, assign it to a contact.
• - Video→switch ON/OFF.
- Mark/Unmark** • Mark/Unmark a tick on a file for further operation. Press  on Mark menu to mark all directly.
- Download** • Download new items.
- Rename** • Rename the audio/image/video.
- Sort** • Sort the files by name, type, time and size.
- Move to phone/memory card** • Move a file from the phone memory to the memory card and vice-versa

⁽¹⁾ Files marked with  cannot be sent.

Properties

Activate

Copy to phone/memory card

- Display part of the ID3 Tag content of an MP3 file.
- DRM file option.
- Copy a file to the phone memory or the memory card.

15.9 Formats and compatibility ⁽¹⁾

- Sounds: mp3, m4a, aac, midi, wav, amr, wma. (aac/aac+, wma are customized)
- Images: jpg, gif, wbmp, bmp
- Videos: 3gp, mp4

15.10 Memory status

Indicates how much space is used and how much is currently free on your phone and memory card (if any).

15.10.1 Phone

View available memory space.

Your phone's memory is shared among several functions: directory, calendar, messages, images, melodies, games and video clips.

15.10.2 Memory card (MicroSD card)

View the memory available on your MicroSD card.



You are advised to save large files (like songs) on your microSD card.

⁽¹⁾ Depending on phone and market.

6 Bluetooth™ ⁽¹⁾



Access this feature by pressing  through  key from the main screen to enter the main menu, then selecting “**Bluetooth**”.

To use your phone with a Bluetooth device, you need to proceed in two steps:

- Pair and register the device to your phone,
- Select it to use hands-free communication. Only one Bluetooth audio device (your Bluetooth headset or your Bluetooth car kit) can be connected during the communication.

Pair and register your Bluetooth device

Activate the Bluetooth feature by selecting the “**Bluetooth\Activation\On**” option. Then enter the “**Device list\Search**” menu to search for connectable Bluetooth devices. From the list, locate the device then select “**Pair**” to connect. If the bluetooth device has no keyboard, enter its default password to register it with your phone. If the Bluetooth device has keyboard/keypad, enter the same set of password on both handset and the device to get it registered.

Press the “**Options**” softkey to show service, rename, authorization, delete and delete all from the connected list.



Don't forget to turn on your Bluetooth device and activate the pairing mode while pairing it with your phone.

Visibility

Select whether you want to hide or show to all.

My phone's name

You may change your phone name, which is visible to the others.

Available functions

Data transmit Exchange files with another bluetooth device.

Handle a call Initiate or receive a phone call with a Bluetooth headset.

Listen to music Support A2DP profile.



Always activate Bluetooth in your phone first before connecting it to a Bluetooth device. Be aware that Bluetooth activation will slightly affect battery life of your phone.

Bluetooth technology allows free wireless connections between all Bluetooth-compliant devices within short range. Please make sure that the Bluetooth headset or the Bluetooth car kit and your mobile phone are in this range and set as “**Visible**”.

Your phone is Bluetooth™ v1.1, v1.2 and v2.0 compatible.

⁽¹⁾ You are highly recommended to use Alcatel OT-BM82 (mono) Bluetooth headset, which has been tested and proved fully compatible with OT-606.

17 Others.....

17.1 Calendar



Once you enter this menu from the main menu, there is a monthly-view calendar for you to keep track of important meetings, appointments, etc. Days with events entered will be marked in color.

Available options:

- Today's appointments** • See today's appointments.
- All appointments** • See all the created appointments.
- Jump to date** • Input the required date and it will be immediately highlighted.
- Create** • Create an appointment.
- Synchronization** • Synchronize with the account you've set.

17.2 Calculator

Access this feature by selecting “**Calculator**” from the main menu.

Enter a number, select the type of operation to be performed using the navigation keys, and enter the second number, then press  key or  to display the result.



If you want to input a decimal, you may press  #

Once an operation is complete, you can select “**Clear**” to clear numbers and carry out a new operation.

To return to the main screen, press the “**Back**” softkey.

17.3 Notes

You can create a note in text or voice format by accessing “**Notes**” from the main menu.

Available options:

- Open** • Open and view note.
- Send** • Send by SMS, MMS, Email or Bluetooth.
- New text note/voice memo** • Add new text note or voice memo.
- Delete** • Delete note.
- Delete all** • Delete all notes.

While recording a voice memo, you can define the audio format (AMR, WAV or AWB), Quality (High/Low), and Storage (Phone, memory card).

17.4 Clock.....

17.4.1 Alarm

Your mobile phone has a built-in alarm clock with a snooze feature. You can set up to five separate alarms and choose whether or not the alarm should repeat.

- Repeat** • You may select **Once** (default)/**Every day/Days** or customize to your desire.
- Snooze** • The alarm will repeat at regular intervals.
- Mode** • You may select the mode of Ringtone: **Ring**, **Vibration only**, **Silence**, **Radio** ⁽¹⁾ or **Vibration and Ring**.

⁽¹⁾ In Radio mode, you are required to plug in headset first. Your phone will power on automatically before Radio is on.

17.4.2 World clock

The World clock shows current local time and the time zone in different cities. You may view up to 3 cities at one time (**Options\Set as my city**).

17.4.3 Clock

Allows you to have settings of date and time, including 12/24h format. You can also set the daylight saving adjustment.



17.5 Converter.....

17.5.1 Unit converter

You can use the Weight and Length conversion by selecting the unit you wish to convert via  , then press  to input the digits. Finally confirm with  key or  key.


17.5.2 Currency converter

The currency converter allows you to:

- Convert a currency directly into euros and vice versa ⁽¹⁾.
- Convert between international currencies, both currencies must be selected by   keys. You are requested to input the appropriate exchange rate.

⁽¹⁾ For the former European national currencies, the currency converter uses the final Euro conversion rates set on 31/12/1998, which are used in accordance with official conversion rules.

8 Settings.....

From the main menu, select the menu icon  and select the function of your choice in order to customise your telephone.

18.1 Phone settings

18.1.1 Display

Wallpaper

The wallpaper is displayed when you switch on your telephone.

By selecting “**Wallpaper**” you can customise it by replacing the default image or animation displayed on your telephone.

Theme

This function enables you to customise the graphic style and the colours of your telephone.

Power On/Off ⁽¹⁾

You can customise your welcome animation or image that appears when you switch on your phone.

You can also customise your OFF screen with an image or animation.

Brightness


You may adjust black level with respect to LCD display by pressing the  key.

⁽¹⁾ Depending on the model.

Backlight

- **Screen** Allows you to reduce brightness for enhanced battery performance and to save power during periods of expected inactivity.
- **Keypad** You may customise your keypad light by selecting **On/Off** or inputting your preferred duration directly.

18.1.2 Languages ⁽¹⁾

Display language for messages (select using ). The “**Automatic**” option selects the language according to the home network (if available).

18.1.3 Headset mode

Switch audio play (incoming call, message beep, alarm beep...) between Headset only and Phone & Headset.


18.1.4 Input mode ⁽²⁾

Please see chapter “Latin input mode”, page 69. In addition to the specific characters table for Cyrillic, Chinese, other data input modes are also available in your telephone. This feature allows you to write short messages and add names with special characters to your directory.

18.1.5 Numeric keys

By customising your keys, you can access any function directly from the main screen.

18.1.6 Auto lock

Your keypad will be locked automatically or you may lock it manually by long pressing the  key.

⁽¹⁾ Contact your network operator to check service availability.

⁽²⁾ Depending on the language.

Unlock the keypad

Short press the  key when locked.



The keypad will be unlocked automatically on receiving a call or plugging in the charger.

18.2 Call settings

See page 40.

18.3 Security

Activate PIN

- The SIM card protection code is requested each time the phone is powered on if this code is activated.

Change PIN

- Change PIN code.

Change PIN2

- A protection code for certain SIM card features (Billing/Cost/FDN, etc.) will be requested if you attempt to access it, if the code is activated. Select to update it with a new one (between 4 and 8 digits).

Activate phone code

- It is requested each time the phone is powered on if this code is activated.

Change phone code


- Change phone password, its initial one is 1234.

Fixed dialed number

- Allows the phone to be “locked” so that it can only dial certain numbers, or numbers with certain prefixes. To activate this function, PIN2 code is mandatory.

18.4 Network

Network selection

- **Preferred network** • List of networks to which you wish to be connected in order of priority (update this list using ).
- **Select network** • The choice of network connection is left up to the user.
- **Search mode** • Network connection can be switched between “Manual” and “Automatic”.

GPRS connection ⁽¹⁾

- **When needed** • GPRS mode active depending on connection requirements.
- **Always** • GPRS mode continuously active.

GPRS international roaming

- GPRS data services can be used while roaming.

18.5 Connectivity

A set of profile settings for messaging (MMS, Email...) and Web connection.

⁽¹⁾ Depending on network availability.

19 Making the most of your mobile.....

19.1 PC suite

You can download software upgrade for free from the website. The PC suite includes:

- **Backup/restore**

You can backup the important data in your mobile and restore them when needed.

- **GPRS Modem**

Use your mobile phone to connect PC to the internet.

- **Multimedia Personalization**

Customize your mobile with images, animations and melodies.

- **Messaging**

You can compose SMS/MMS easily on your PC and transfer them to your phone.

Supported Operating Systems

Windows 2000/XP/Vista/Windows 7.

19.2 Webcam ⁽¹⁾

You can use your phone as a webcam for instant messaging on your PC.

- Connect your phone to PC via USB cable.
- Go to “**My computer**” folder on your PC and find USB video device (Under Scanners & Cameras).



Webcam is disabled when Java application is running.

⁽¹⁾ The using of webcam may vary according to the operating system of your PC.

20 Latin input mode/character table

There are two text entry methods that can be used to write messages:

- Normal
- Predictive with the eZi mode

 
Normal

This mode allows you to type text by choosing a letter or a sequence of characters.

Predictive eZi mode

This mode speeds up the writing of your text.

Press the key once and the word will be modified each time you press a key. As you go on, the word will keep changing.

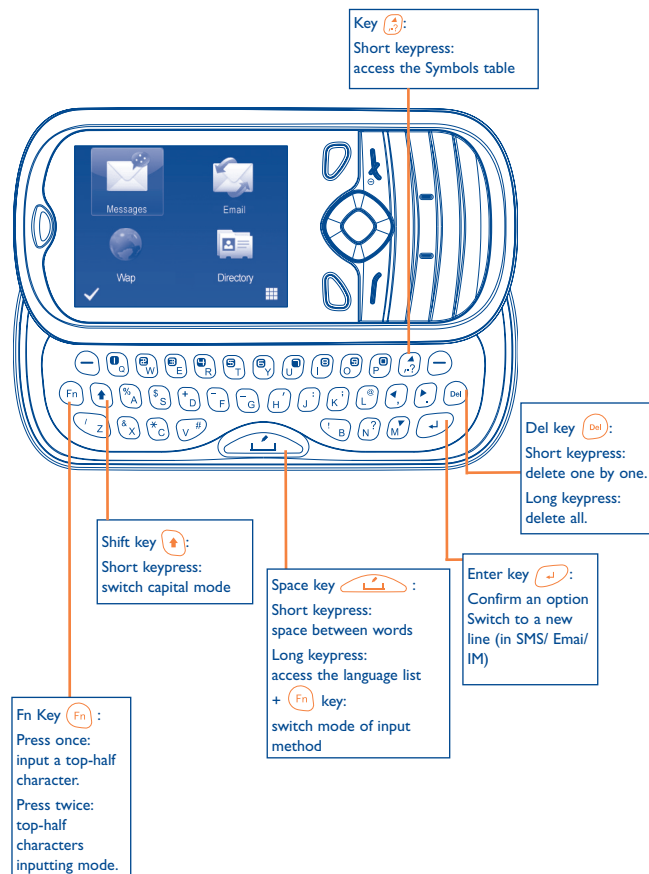



Symbol table

Short press the key to display the symbols table; the cursor is positioned in the centre. Use the navigation key to move it and the key to select.

■	,	?	!	'	"	()	@	\	/	:
-	;	+	-	*	=	%	&	<	>	£	\$
¥	§	€	¤	α	[]	{	}	~	#	~
ø	Å	â	Δ	Φ	Γ	Λ	Ω	Π	Σ	Θ	
≡	Æ	æ	ß	i	¿	^	!				

2 | Telephone warranty.....

Your phone is warranted against any defect which may occur in conditions of normal use during the warranty period of twelve (12) months ⁽¹⁾ from the date of purchase as shown on your original invoice.

Batteries ⁽²⁾ and accessories sold with your phone are also warranted against any defect which may occur during the first six (6) months ⁽¹⁾ from the date of purchase as shown on your original invoice.

In case of any defect of your phone which prevents you from normal use thereof, you must immediately inform your vendor and present your phone with your proof of purchase.

If the defect is confirmed, your phone or part thereof will be either replaced or repaired, as appropriate. Repaired Phone and accessories are entitled to a one (1) month warranty for the same defect. Repair or replacement may be carried out using reconditioned components offering equivalent functionality.

This warranty covers the cost of parts and labor but excludes any other costs.

⁽¹⁾ The warranty period may vary depending on your country.

⁽²⁾ The life of a rechargeable mobile phone battery in terms of conversation time standby time, and total service life, will depend on the conditions of use and network configuration. Batteries being considered expendable supplies, the specifications state that you should obtain optimal performance for your phone during the first six months after purchase and for approximately 200 more recharges.

This warranty shall not apply to defects to your phone and/or accessory due to (without any limitation):

- 1) Non-compliance with the instructions for use or installation, or with technical and safety standards applicable in the geographical area where your phone is used,
- 2) Connection to any equipment not supplied or not recommended by TCT Mobile Limited,
- 3) Modification or repair performed by individuals not authorised by TCT Mobile Limited or its affiliates or your vendor,
- 4) Inclement weather, lightning, fire, humidity, infiltration of liquids or foods, chemical phones, download of files, crash, high voltage, corrosion, oxidation...

Your phone will not be repaired in case labels or serial numbers (IMEI) have been removed or altered.

There are no express warranties, whether written, oral or implied, other than this printed limited warranty or the mandatory warranty provided by your jurisdiction.

In no event shall TCT Mobile Limited or any of its affiliates be liable for incidental or consequential damages of any nature whatsoever, including but not limited commercial loss, to the full extent those damages can be disclaimed by law. Some countries/states do not allow the exclusion or limitation of incidental or consequential damages, or limitation of the duration of implied warranties, so the preceding limitations or exclusions may not apply to you.

22 Accessories ⁽¹⁾

The latest generation of Alcatel GSM mobile phones offers a built-in handsfree feature that allows you to use the telephone from a distance, placed on a table for example. For those who prefer to keep their conversations confidential, an earpiece is also available known as the headset.



Standard charger



UK charger



Battery



USB cable



Stereo headset




Only use your telephone with Alcatel batteries, chargers and accessories in your box.

⁽¹⁾ Images for reference only.


23 Troubleshooting

Before contacting the aftersales department, you are advised to follow the instructions below:

- You are advised to switch off the telephone from time to time to optimise its performance.
- You are advised to fully charge () the battery for optimal operation.
- Avoid storing large amounts of data in your telephone as this may affect the performance of your telephone.

and carry out the following checks:

My mobile phone will not switch on

- Press  until the screen comes on
- Check the battery charge level
- Check the battery contacts, remove and reinstall your battery, then turn your telephone back on

My phone has not responded for several minutes

- Press the  key
- Remove the battery and re-insert it, then switch the phone back on

My screen is difficult to read

- Clean your screen
- Use your mobile phone in accordance with the recommended conditions of use

My mobile phone turns off by itself

- Check that your keypad is locked when you are not using your mobile phone
- Check the battery charge level

My mobile phone will not charge properly

- Make sure that your battery is not completely discharged; the battery charge indicator can take several minutes and may be accompanied by a quiet whistling sound
- Make sure charging is carried out under normal conditions (0°C - +40°C)
- Make sure your battery is inserted. It must be inserted before plugging in the charger
- Make sure you are using an Alcatel battery and charger in the box
- When abroad, check that the electrical current is compatible


My mobile phone will not connect to a network

- Try connecting in another location
- Verify the network coverage with your operator
- Check with your operator that your SIM card is valid
- Try selecting the available network(s) manually (see page 67)
- Try connecting at a later time if the network is overloaded

SIM card error

- Make sure the SIM card has been correctly inserted (see page 19)
- Verify with your operator that your SIM card is 3V or 1.8V compatible; the old 5V SIM cards cannot be used
- Make sure the chip on your SIM card is not damaged or scratched

Unable to make outgoing calls

- Make sure you have dialled a valid number and press the  key
- For international calls, check the country and area codes
- Make sure your mobile phone is connected to a network, and that the network is not overloaded or unavailable
- Check your subscription status with your operator (credit, SIM card valid, etc.)
- Make sure you have not barred outgoing calls (see page 41)

Unable to receive incoming calls

- Make sure your mobile phone is switched on and connected to a network (check for overloaded or unavailable network)
- Check your subscription status with your operator (credit, SIM card valid, etc.)
- Make sure you have not forwarded incoming calls (see page 40)
- Make sure that you have not barred certain calls

The caller's name does not appear when a call is received

- Check that you have subscribed to this service with your operator
- Your caller has concealed his/her number

The sound quality of the calls is not optimal

- You can adjust the volume during a call by means of the  key
- Check the network strength 

I am unable to use the features described in the manual

- Check with your operator to make sure that your subscription includes this service
- Make sure this feature does not require an Alcatel accessory

When I select a number from my directory, the number is not dialled

- Make sure that you have correctly recorded the number in your file
- Make sure that you have selected the country prefix when calling a foreign country

I am unable to add a contact in my directory

- Make sure that your SIM card directory is not full; delete some files or save the files in the phone directory (i.e. your professional or personal directories)

My callers are unable to leave messages on my voicemail

- Contact your network operator to check service availability

I cannot access my voicemail

- Make sure your operator's voicemail number is correctly entered in "My numbers"
- Try later if the network is busy

I am unable to send and receive MMS

- Check your phone memory available as it might be full
- Contact your network operator to check service availability and check MMS parameters (see page 30)
- Verify the server centre number or your MMS profile with your operator
- The server centre may be swamped; try again later

The flicking icon is displayed on my standby screen

- You have saved too many short messages on your SIM card; delete some of them or archive them in the phone memory

"No service" is displayed

- You are outside of the network coverage area

I have already entered 3 incorrect PIN codes

- Contact your network operator to obtain the PUK code (Personal Unblocking Key)

I am unable to connect my telephone to my computer

- Install first of all Alcatel's PC suite
- Use "Install the connection" and perform the installation
- Check that your computer meets the requirements for Alcatel's PC Suite installation

I am unable to download new files

- Check for free space
- Delete some files
- Select the MicroSD Card to store the files you downloaded
- Check your subscription status with your operator

The phone can't be detected by others via Bluetooth

- Make sure that Bluetooth is turned on and your mobile phone is visible to other users (see page 59)

My mobile phone is frozen, can't power on

- Make sure your battery is not completely used up or damaged
- Remove your battery, **remove your SIM** card then reinstall them to power on again
- Hold down # and press power on/off key at same time to reset it



ALL User phone data: contacts, photos, messages and files, downloaded applications like Java games will be **lost permanently**.

How to make your battery last longer

- Make sure you followed the complete charge time (minimum 3 hours)
- After a partial charge, the battery level indicator may not be exact. Wait for at least 20 minutes after removing the charger to obtain an exact indication
- Switch on the backlight upon request.
- Extend email auto-check interval as long as possible.
- Update news, weather information, upon demand manually or set its auto-check interval longer.
- Exit Java background-running applications if they are not being used for a long time.
- Deactivate Bluetooth when not in use.

ALCATEL is a trademark of Alcatel-Lucent
and used under license by
TCT Mobile Limited.

All rights reserved © Copyright 2010
TCT Mobile Limited.

TCT Mobile Limited reserves
the right to alter material or technical
specification without prior notice.